



METROLOGIC INSTRUMENTS, INC.

MS5100 Eclipse™ Series
Installation and User's Guide



LOCATIONS

CORPORATE HEADQUARTERS

North America	Metrologic Instruments, Inc. 90 Coles Road Blackwood, NJ 08012-4683	Customer Service: 1-800-ID-METRO Tel: 856-228-8100 Fax: 856-228-6673 Email: info@metrologic.com Internet: www.metrologic.com
----------------------	---	---

EUROPEAN HEADQUARTERS

Germany, Middle East and Africa	Metrologic Instruments GmbH Dornierstrasse 2 82178 Puchheim b. Munich, Germany	Tel: +49 (0) 89 89019 0 Fax: +49 (0) 89 89019 200 Email: info@europe.metrologic.com
Spain	Metrologic Eria Ibérica SL Julián Camarillo, 29 D-1 Edificio Diapasón 28037 Madrid	Tel: +34 913 272 400 Fax: +34 913 273 829 Email: info@es.metrologic.com
Italy	Metrologic Italia Srl Via Emilia 70 40064 Ozzano dell'Emilia (BO)	Tel: +39 0 51 6511978 Fax: +39 0 51 6521337 Email: info@it.metrologic.com
France	Metrologic Eria France SA 69 Rue de la Belle Etoile ZI Paris Nord II, BP 50057 95947 – ROISSY CDG CEDEX	Tel: +33 (0) 1 48.63.78.78 Fax: +33 (0) 1 48.63.24.94 Email: info@fr.metrologic.com
United Kingdom	Metrologic Instruments UK Limited 58 Tempus Business Centre Kingsclere Road, Basingstoke Hampshire RG21 6XG	Tel: +44 (0) 1256 365900 Fax: +44 (0) 1256 365955 Email: info@uk.metrologic.com

ASIA

Singapore	Metrologic Asia (Pte) Ltd No.8 Kaki Bukit Place 4 th Floor Singapore 416186	Tel: 65-842-7155 Fax: 65-842-7166 Email: info@sg.metrologic.com
China	Metro (Suzhou) Technologies Co., Ltd. 221 Xing Hai Street Suzhou Industrial Park Suzhou, China 215021	Tel: 86-512-62572511 Fax: 86-512-62571517 Email: info@cn.metrologic.com
Japan	Metrologic Japan Co., Ltd. Matsunoya Building, 6 Floor 3-14-8 Higashiueno Taitou-Ku Tokyo 110-0015, Japan	Tel: 81-3-3839-8511 Fax: 81-3-3839-8519 Email: info@jp.metrologic.com

SOUTH AMERICA

Brazil	Metrologic do Brasil Ltda. Rua da Paz 2059 CEP 04713-002 Chácara Santo Antônio São Paulo, SP, Brasil	Tel: 55-11-5182-8226 Fax: 55-11-5182-8315 Email: info@br.metrologic.com
Outside Brazil	Metrologic South America Rua da Paz 2059 CEP 04713-002 Chácara Santo Antônio São Paulo, SP, Brasil	Tel: 55-11-5182-7273 Fax: 55-11-5182-7198 Email: info@sa.metrologic.com

COPYRIGHT

© 2002 by Metrologic Instruments, Inc. All rights reserved. No part of this work may be reproduced, transmitted, or stored in any form or by any means without prior written consent, except by reviewer, who may quote brief passages in a review, or provided for in the Copyright Act of 1976.

Products and brand names mentioned in this document are trademarks of their respective companies.

TABLE OF CONTENTS

Introduction.....	1
Accessories and Supplies	2
Quick Start.....	3
Standard Scanner Installation	4
Keyboard Wedge Scanner Installation	5
USB Scanner Installation.....	7
Disconnecting the PowerLink Cable from the Scanner	8
Scanner Parts.....	9
Audible Indicators.....	10
Visual Indicators	11
Failure Modes.....	12
Scan Area.....	13
Labels.....	14
Troubleshooting Guide	15
RS-232 Demonstration Program	19
Maintenance.....	19
Appendix A	
Specifications	20
Appendix B	
Default Settings	22
Appendix C	
Scanner Pinout Connections	27
Cable Connector Configurations	29
Appendix D	
Warranty and Disclaimer	31
Appendix E	
Notices	31
Appendix F	
Patent Information	33
Index.....	34

INTRODUCTION

The MS5145 Eclipse™ is a single-line, hand-held laser scanner.

Equipped with Metrologic's patented CodeGate™ technology, Eclipse™ can be used in a wide variety of applications. CodeGate technology allows the user to easily target the desired bar code and complete the data transmission with a simple press of a button. This combination makes Eclipse™ a perfect selection for menu scanning, point-of-sale, document processing and inventory control.

With Metrologic's state-of-the-art scanning technology embedded inside, the MS5145 Eclipse™ has a longer working range and a wider scan field than a typical CCD. The width of the scan line grows as the scanner moves further away from bar codes. In addition, the laser beam pulses making lining up bar codes easy, and when the scanner senses a bar code (CodeSense™ Mode), the laser beam automatically switches to scan mode and activates CodeGate to ensure high-speed scanning and accuracy.

Many of the standard features include: PowerLink User-replaceable cables, Bits 'n' Pieces™ data editing, User Friendly Programming using MetroSelect™ bar codes, or MetroSet 2 Windows-based configuration utility.

Eclipse™	Interface
MS5145-9*	OCIA*
MS5145-11	IBM 468X/469X
MS5145-41	Full RS-232/Light Pen Emulation
MS5145-37	USB/Keyboard Wedge

** At the time this manual was printed, the OCIA version of the scanner was not available.*

ACCESSORIES AND SUPPLIES


The following is a list of parts that may or may not be included in the MS5145 kit.

- **Eclipse™ MS5145** Single-Line Laser Scanner
- **AC to DC Power Transformer** – Regulated 5.2VDC @ 650 mA output
 - One of the following may be included:
 - 120 V United States [MLPN 45-45593]
 - 220 V - 240 V Continental European [MLPN 45-45591]
 - 220 V – 240 V United Kingdom [MLPN 45-45592]
- **PowerLink Cable**
 - One of the following may be included:
 - RS232 Cable: 2.1m (7') straight cord, long bend relief , with built-in power jack [MLPN 55-55000A]
 - AT/PS2/XT Keyboard Cable: 2.4m (8') straight cord, long bend relief, with built-in power jack [MLPN 55-55002A]
 - PS2 Keyboard Cable: 2.4m (8') straight cord, long bend relief, with built-in power jack [MLPN 55-55142A]
 - PS2 Keyboard Cable: 1.5m (5') straight cord, long bend relief, *without* built-in power jack [MLPN 55-55166A]
 - Stand Alone Keyboard Cable: 2.1m (7') straight cord, long bend relief, with built-in power jack [MLPN 55-55020A]
 - Stand Alone Keyboard Cable: 1.5m (5') straight cord, long bend relief, *without* built-in power jack [MLPN 55-55164A]
 - USB Cable: 1.5m (5') straight cord, long bend relief, *without* built-in power jack [MLPN 55-55165A]
- **Installation and User's Guide** [MLPN 70-79001]
- **MetroSelect™ Single Line Configuration Guide** [MLPN 00-02544]

Other items may be ordered for the specific protocol being used. To order additional items, contact the dealer, distributor or your local Metrologic representative.

QUICK START

1. Connect the 10-pin RJ45 plug into the jack on the Eclipse™ MS5145. You will hear a 'click' when the connection is made.
2. Connect the L-shaped plug of the power supply into the power jack on the PowerLink cable.
3. Connect the power supply into an AC outlet. Make sure the AC input requirements of the power supply match the AC outlet.
(See caution statement below)

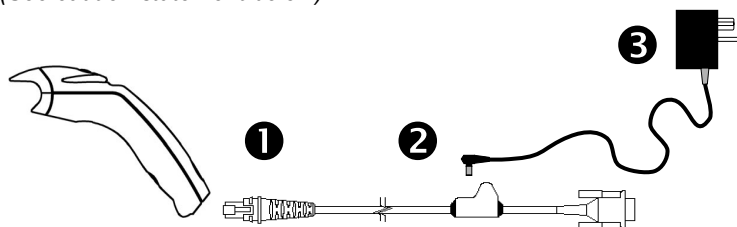

4. When the MS5145 is ready to scan, the green LED will turn on, the red LED will flash and the scanner will beep once.



5. The MS5145's operation is automatic. The laser pulses on and off. The green LED remains on during normal pulse operation and it blinks during power save mode.

Operational Test

6. Place a bar code in front of the scanning window. While aiming at the bar code with the blinking laser beam, press the CodeGate™ button, scanner will beep once and flash the red LED if the bar code was successfully decoded.



7. The scanner is shipped from the factory programmed with default settings. To configure the MS5145 scanner to meet the host system's specific needs, refer to the Programming Guide or custom configuration guide for instructions on how to change the scanners default settings.

Caution:




To maintain compliance with federal regulations 21 CFR, Part 1040.10, section (f)(6) the scanner must be plugged into an electrical outlet with a switch accessible to the user or be powered by a host system containing a switch that will disable power to the scanner.

STANDARD RS232 SCANNER INSTALLATION

1. Turn off the host system.
2. Connect the 10-pin RJ45 plug of the PowerLink cable into the jack on the MS5145 RS232 scanner.

Note: If the MS5145 is receiving power from the host system, skip to step #5. (See *caution statement below**)

3. Connect the L-shaped plug of the power supply into the power jack on the PowerLink cable. (See *caution statement below***)
4. Make sure the AC input requirements of the power supply match the AC outlet. Connect the power supply into an AC outlet.
5. Connect the PowerLink cable to the proper port on the host system.
6. Turn on the host system

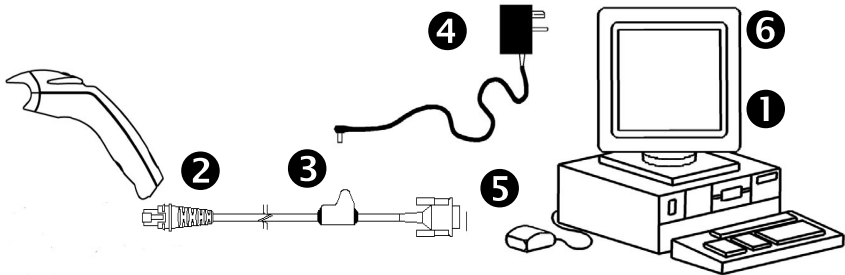

7. When the MS5145 is ready to scan, the green LED will turn on, the red LED will flash and the scanner will beep once.

Manufacturer's Note:

Plugging the scanner into a port on the host system does not guarantee that the scanned information will be communicated properly to the host system. The scanner and/or the host system may need to be configured for communications to occur.

Caution:



To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN 60950.

*To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN 60950, the power source should meet applicable performance requirements for a limited power source.

**To maintain compliance with federal regulations 21 CFR, Part 1040.10, section (f)(6) the scanner must be plugged into an electrical outlet with a switch accessible to the user or be powered by a host system containing a switch that will disable power to the scanner.

KEYBOARD WEDGE SCANNER INSTALLATION

1. Turn off the host system.
2. Connect the 10-pin RJ45 plug of the PowerLink cable into the jack on the MS5145.
3. Disconnect the keyboard from the host system.
4. Connect the L-shaped plug of the power supply into the power jack on the PowerLink cable (*refer to the manufacturer's recommendation and Note on page 6*).
5. Make sure the AC input requirements of the power supply match the AC outlet. Connect the power supply into an AC outlet (*see caution statement on page 6***).
6. The PowerLink "Y" cable is terminated with a 5-pin DIN female connector on one end, and a 6-pin mini DIN male on t

KEYBOARD WEDGE INSTALLATION (CONTINUED)

Manufacturer's Recommendation

If the keyboard port of the host system cannot supply enough current, the use of an external power supply with the MS5145 Keyboard Wedge will be necessary. Powering the MS5145 directly from the computer keyboard connector could interfere with the operation of the scanner or the computer. Not all computers supply the same current through the keyboard port, so a scanner may work on one computer and not another (*see caution statement on page 5*).

Caution:



To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN 60950.

*To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN 60950, the power source should meet applicable performance requirements for a limited power source.

**To maintain compliance with federal regulations 21 CFR, Part 1040.10, section (f)(6) the scanner must be plugged into an electrical outlet with a switch accessible to the user or be powered by a host system containing a switch that will disable power to the scanner


Note: The center of the L-Shaped plug of the power supply is negative ("-").

USB SCANNER INSTALLATION

1. Connect the 10-pin RJ45 plug of the PowerLink cable into the jack on the MS5145 USB scanner.

Note: The MS5145 USB scanner will receive power directly from the host system; no external power supply is required.


2. Connect the USB connector of the PowerLink cable into the USB port of the host system.

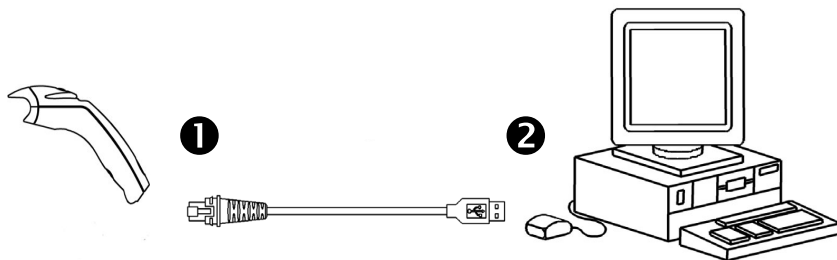


3. When the MS5145 is ready to scan, the green LED will turn on, the red LED will flash and the scanner will beep once.

DISCONNECTING THE POWERLINK CABLE FROM THE SCANNER

Before removing the cable from the scanner, Metrologic recommends that the power on the host system is off and the power supply has been disconnected from the PowerLink cable.

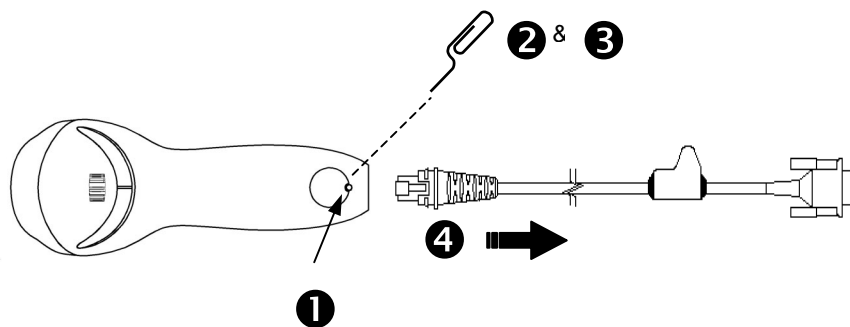

1. Locate the small 'pin-hole' on the back of the scanner.
2. Bend an ordinary paperclip into the shape shown above.
3. Insert the paperclip (or other small metallic pin) into the small 'pin-hole'.
4. You will hear a faint 'click'. Pull gently on the strain-relief of the PowerLink cable and it will slide out of the scanner.

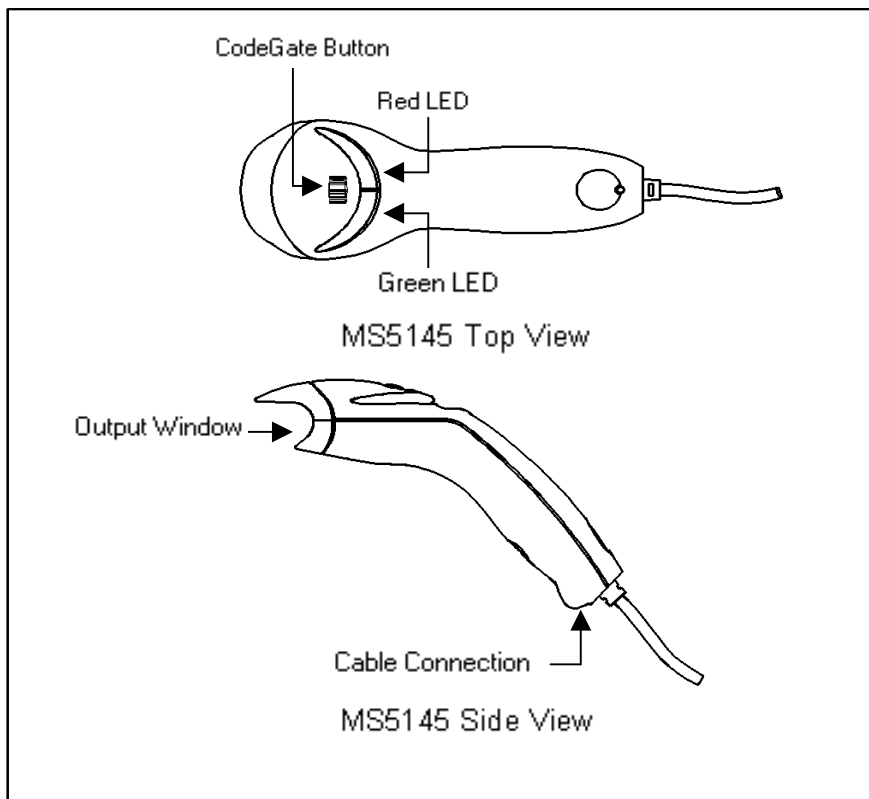

1. **Green & Red LEDs**

The MS5145's laser pulses on and off when no bar code is presented, and stays on when it senses a bar code. The green LED remains on during normal pulse and scanning operation, and it blinks during power save mode. On a successful read of a bar code, the red LED will flash and the scanner will beep once. The LEDs are also used as diagnostic indicators and mode indicators.

2. **Output Window**


Laser Light emits from this aperture.

3. **PowerLink Cable**

The 10-pin modular plug on the PowerLink cable connects into the 10-pin modular jack on the MS5145.


AUDIBLE INDICATORS

When the MS5145 scanner is operational, it provides audible feedback. These sounds indicate the status of the scanner. Eight settings are available for the tone of the beep (normal, 6 alternate tones and no tone). To change the tone, refer to the Configuration Guide.




One Beep – on power up

The green LED will turn on, then the red LED will flash and the scanner will beep once. The red LED will remain on for the duration of the beep. The scanner is now ready to scan.



One Beep – during operation


When the scanner successfully reads a bar code, the red LED will flash and the scanner will beep once (if programmed to do so). If the scanner does not beep once and the red light does not flash, then the bar code has not been successfully read.



Three Beeps – during operation

When entering the program mode, the red LED will flash while the scanner simultaneously beeps three times. The red LED will continue to flash until the unit exits program mode. Upon exiting program mode, the scanner will beep three times and the red LED will stop flashing.

When configured for communication timeout, 3 beeps during operation will indicate that a communication timeout has occurred.



Three Beeps – on power up

This is a failure indicator. Refer to the *Failure Modes* section of this guide on page 11.



Razzberry Tone

This is a failure indicator or an invalid code read during program mode. Refer to the *Failure Modes* section of this guide on page 12.

VISUAL INDICATORS

There is a red LED and a green LED on the MS5145. When the scanner is on, the activity of the LEDs indicates the status of the current scan and the scanner.



Green and Red LEDs are off


The LEDs will not be illuminated if the scanner is not receiving power from the host or transformer.



Steady Green


Indicates normal pulse or continuous laser operation.

Accompanied by a razzberry tone, it indicates that an invalid bar code has been scanned.




Flashing Green

After a period of inactivity, the *ON* time of the pulsing laser will be shortened. During this time the green LED will flash. This indicates that the scanner is in a *power saver* mode. When a bar code enters the laser field, the scanner will wake up and return to normal pulse mode.




Steady Green and Single Red Flash

When the scanner successfully reads a bar code, the red LED will flash and the scanner will beep. If the red LED does not flash and the scanner does not beep, then the bar code has not been successfully read.

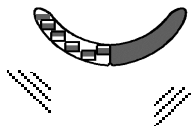

Steady Green and Steady Red

After a successful read, the scanner transmits the data to the host device. Some communication modes require that the host inform the scanner when data is ready to be received. If the host is not ready to accept the information, the scanner's red LED will remain on until the data can be transmitted.

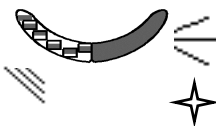

Steady Green and Continuous Flashing Red

When entering the program mode, the red LED will flash, the green LED will turn on and the scanner will beep three times. The red LED will continue to flash and the green LED will stay on until the unit exits the program mode.

FAILURE MODES




One Razzberry Tone on Power-up

This indicates the scanner has experienced a laser or flipper subsystem failure. Return the unit for repair to a Metrologic Authorized Service Center.



Continuous Razzberry Tone with all LEDs off


If, upon power up, the scanner emits a continuous razzberry tone, then the scanner has experienced an electronic failure. Return the unit for repair to a Metrologic Authorized Service Center.



Three Beeps – on power up

If the scanner beeps 3 times on power up then, the non-volatile memory (NovRAM) that holds the scanner configuration has failed. Return the unit for repair to a Metrologic Authorized Service Center.

SCAN AREA

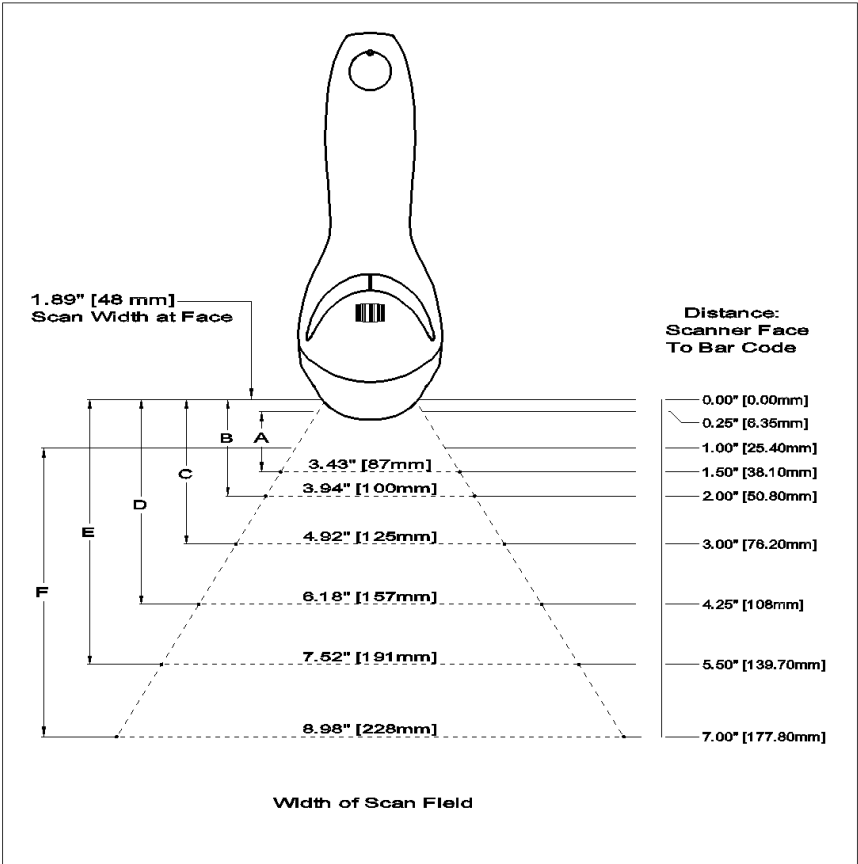

Minimum Bar Code Element Width						
	A	B	C	D	E	F
mm	.10	.12	.17	.26	.33	.66
mils	4.1	4.8	6.8	10.4	13	26

LABELS


Each scanner has one label on the underside of the unit. This label has the model number, date of manufacture, serial number, laser and caution information. The following is an example of this label.



Patent Information-See Manual
FCC and ICES-003 Information-See Manual
Warranty VOID if case opened.
Contains no user serviceable components.
Complies with 21 CFR 1040.10 & 1040.11
IEC 60825-1:1993+A2:2001




5V == CE

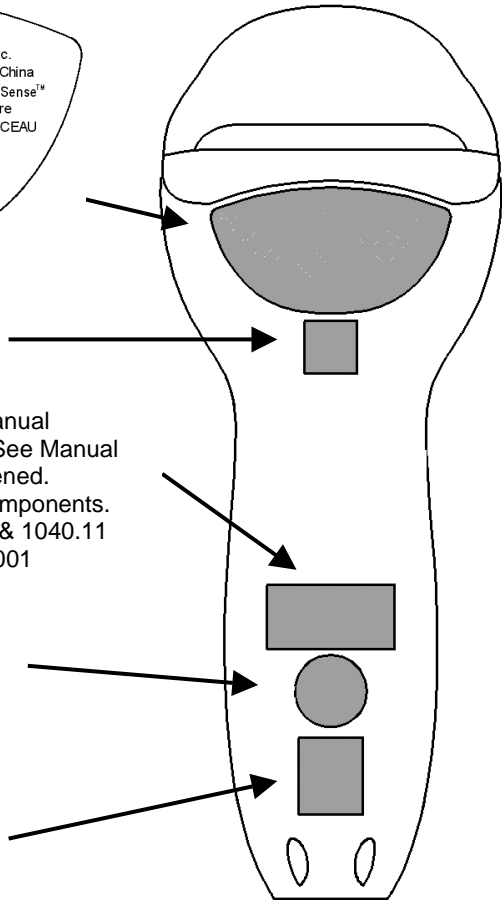

Top View

EVITER TOUTE EXPOSITION-Lumiere laser emis par cette ouverture
AVOID EXPOSURE-Laser light is emitted from this aperture

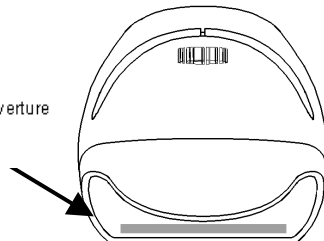

TROUBLESHOOTING GUIDE

The following guide is for reference purposes only. Contact a Metrologic representative to preserve the limited warranty terms on page 31.

SYMPTOMS	POSSIBLE CAUSE(S)	SOLUTION
No LEDs, beep or laser line	No power is being supplied to the scanner	Check transformer, outlet and power strip. Make sure the cable is plugged into the scanner.
No LEDs, beep	No power is being supplied to the scanner from host	Some host systems cannot supply enough current to power the MS5145. Use the proper power supply.
3 beeps on power up	Non-volatile RAM failure	Contact a Metrologic Representative, if the unit will not hold the programmed configuration.
Continuous razz tone on power up	RAM or ROM failure	Contact a Metrologic Representative.
Razz tone at power up	VLD failure or a Scanner flipper failure	Contact a Metrologic Representative.
Unit scans, Communicates and beeps twice	Same Symbol timeout set too short	Adjust same symbol time out for a longer time.
The unit powers up but does not beep	Beeper disabled. No tone selected	Enable beeper. Select tone.

TROUBLESHOOTING GUIDE (CONTINUED)

SYMPTOMS	POSSIBLE CAUSE(S)	SOLUTION
The unit powers up, but does not scan	Scanning a particular symbology that is not enabled	UPC/EAN, Code 39, Interleaved 2 of 5, Code 93, Code 128 and Codabar are enabled by default. Verify that the type of bar code being read has been selected.
The unit powers up, but does not scan and/or beep	The scanner has been programmed for a character length lock, or a minimum length and bar code being scanned does not satisfy the programmed criteria	Verify that the bar code that is being scanned falls into the criteria (Typical of Non-UPC/EAN codes.) <i>The scanner defaults to a minimum of 3 character bar code.</i>
The unit scans a bar code, but locks up after the first scan and the red LED stays on	The scanner is configured to support some form of host handshaking but is not receiving the signal	If the scanner is setup to support ACK/NAK,RTS/CTS, XON/XOFF) or D/E, verify that the host cable and host are supporting the handshaking properly.
The unit scans, but the data transmitted to the host is incorrect	The scanner's data format does not match the host system requirements	Verify that the scanner's data format matches that required by the host. Make sure that the scanner is connected to the proper host port.
Scanner beeps at some bar codes and NOT for others of the same bar code symbology	The print quality of the bar code is suspect Or The aspect ratio of the bar code is out of tolerance	Check print mode. The type of printer could be the problem. Change print settings. For example change to econo mode or high speed.

TROUBLESHOOTING GUIDE (CONTINUED)

SYMPTOMS	POSSIBLE CAUSE(S)	SOLUTION
Scanner beeps at some bar codes and NOT for others of the same bar code symbology	The bar code may have been printed incorrectly	Check if it is a check digit/character/or border problem.
Scanner beeps at some bar codes and NOT for others of the same bar code symbology	The scanner is not configured correctly for this type of bar code	Check if check digits are set properly.
Scanner beeps at some bar codes and NOT for others of the same bar code symbology	The minimum symbol length setting does not work with the bar code	Check if the correct minimum symbol length is set.
The unit scans the bar code but there is no data	Configuration is not correct	Make sure the scanner is configured for the appropriate communication mode.
The unit scans but the data is not correct (Keyboard Wedge)	Configuration is not correct	Make sure that the proper PC type AT, PS2 or XT is selected. Verify correct country code and data formatting are selected. Adjust intercharacter delay.

TROUBLESHOOTING GUIDE (CONTINUED)

SYMPTOMS	POSSIBLE CAUSE(S)	SOLUTION
The unit is not transmitting each character (Keyboard Wedge)	Configuration is not correct	Increase interscan code delay setting. Adjust whether the F0 break is transmitted. It may be necessary to try this in both settings.
Alpha characters show as lower case (Keyboard Wedge)	Computer is in Caps Lock mode	Enable Caps Lock detect setting of the scanner to detect whether the PC is operating in Caps Lock.
Everything works except for a couple of characters (Keyboard Wedge)	These characters may not be supported by that country's key lookup table	Try operating the scanner in Alt mode.
Power-up OK and scans OK but does not communicate properly to the host	Com port at the host is not working or configured properly or Cable not connected to the proper comm port	Check to make sure that the baud rate, data bits, stop bits and parity of the scanner and the communication port match and the program is looking for "RS-232" data.
The host is receiving data but the data does not look correct	The scanner and host may not be configured for the same interface font	Check that the scanner and the host are configured for the same interface font.
Characters are being dropped	Scanner may not be set for sufficient Inter-character delay	Add some inter-character delay to the transmitted output by using the MetroSelect Programming Guide MLPN 2544.

RS-232 DEMONSTRATION PROGRAM

If an RS-232 scanner is not communicating with your IBM compatible PC, key in the following BASIC program to test that the communication port and scanner are working. This program is for demonstration purposes only. It is only intended to prove that cabling is correct, the communication port is working, and the scanner is working. If the bar code data displays on the screen while using this program, it only demonstrates that the hardware interface and scanner are working. At this point, investigate whether the application software and the scanner configuration match. If the application does not support RS-232 scanners, a software wedge program that will take RS-232 data and place it into a keyboard buffer may be needed. This program tells the PC to ignore RTS-CTS, Data Set Ready (DSR) and Data Carrier Detect (DCD) signals. If the demonstration program works and yours still does not, jumper RTS to CTS and Data Terminal Ready (DTR) to DCD and DSR on the back of your PC.

```
10      CLS
20      ON ERROR GOTO 100
30      OPEN "COM1:9600,S,7,1,CS0,DS0,CD0,LF" AS #1
35      PRINT "SCAN A FEW BAR CODES"
40      LINE INPUT #1, BARCODE$
50      PRINT BARCODE$
60      K$ = INKEY$: IF K$ = CHR$(27) THEN GOTO 32766
70      GOTO 40
100     PRINT "ERROR NO."; ERR; " PRESS ANY KEY TO TERMINATE."
110     K$ = INKEY$: IF K$ = "" THEN GOTO 110
32766   CLOSE: SYSTEM
32767   END
```

MAINTENANCE

Smudges and dirt on the window of the scanner can interfere with proper scanning. Therefore, the output window will need occasional cleaning.

1. Spray glass cleaner onto a lint-free, non-abrasive cleaning cloth.
2. Gently wipe the scanner window.

APPENDIX A

Specifications

OPERATIONAL	
Light Source	Visible Laser Diode 650 nm \pm 10 nm
Laser Power (peak)	<1.0 mW
Depth of Scan Field (for 13mil at Default)	0 mm – 140 mm (0" – 5.5")
Scan Speed	72 \pm 2 scan lines per second
Scan Pattern	Single scan line
Minimum Bar Width	0.102 mm (4.0 mil)
Decode Capability	Autodiscriminates all standard bar codes; for others call Metrologic
System Interfaces	RS232, Keyboard Wedge, Light Pen Emulation, IBM 468X/469X, OCIA, Stand Alone Keyboard, USB
Print Contrast	35% minimum reflectance difference
Number Characters Read	Up to 80 data characters (Maximum number will vary based on symbology and density)
Roll, Pitch, Yaw	42°, 68°, 52°
Beeper Operation	7 tones or no beep
Indicators (LED)	Green = laser on, ready to scan Red = good read
MECHANICAL	
Length	170 mm (6.7")
Width-Handle	39 mm (1.5")
Width-Head	63 mm (2.5")
Height-Head	35 mm (1.4")
Height-Handle	31 mm (1.2")
Weight	97 g (3.4 oz)
Cable	Long bend relief PowerLink Cable (<i>see Page 2</i>)

APPENDIX A (CONTINUED)

ELECTRICAL	
Input Voltage	5 VDC \pm 0.25 V
Power - Operating	0.675 mW
Current - Operating	135 mA peak @ 5 VDC
DC Transformers	Class 2; 5.2 V @ 650 mA
UL	UL listed for US and Canada; UL 60950, C22.2 No. 60950
Laser Class	CDRH: Class II; IEC 60825-1: 1993+A1:1997+A2:2001 Class 1
EMC	Class B: FCC Part 15, ICES-003, European Union Directive
ENVIRONMENTAL	
Operating Temperature	0°C to 40°C (32°F to 104°F)
Storage Temperature	-40°C to 60°C (-40°F to 140°F)
Humidity	5% to 95% relative humidity, non-condensing
Light Levels	Up to 4842 Lux (450 footcandles)
Shock	Designed to withstand 1.5 m (5') drops
Contaminants	Sealed to resist airborne particulate contaminants
Ventilation	None required

APPENDIX B

Default Settings

Many functions of the scanner can be “programmed” – that is, enabled or disabled. The scanner is shipped from the factory programmed to a set of default conditions. The default parameter of the scanner has an asterisk (*) in the charts on the following pages. If an asterisk is not in the default column then the default setting is OFF or DISABLED. Every communication does not support every parameter. If the communication supports a parameter listed in the charts on the following pages, a check mark will appear.

Parameter	Default	OCIA	RS232	Light Pen	IBM 46XX	KBW	USB
Normal Scan Mode (Blink)	*	✓	✓	✓	✓	✓	✓
Continuous Scan Mode		✓	✓	✓	✓	✓	✓
UPC/EAN	*	✓	✓	✓	✓	✓	✓
UPC-A	*	✓	✓	✓	✓	✓	✓
EAN-8	*	✓	✓	✓	✓	✓	✓
EAN-13	*	✓	✓	✓	✓	✓	✓
UPC-E	*	✓	✓	✓	✓	✓	✓
Code 128	*	✓	✓	✓	✓	✓	✓
Code 93	*	✓	✓	✓	✓	✓	✓
Codabar	*	✓	✓	✓	✓	✓	✓
Interleaved 2 of 5 (ITF)	*	✓	✓	✓	✓	✓	✓
MOD 10 check on ITF		✓	✓	✓	✓	✓	✓
Code 11		✓	✓	✓	✓	✓	✓
Code 39	*	✓	✓	✓	✓	✓	✓
Full ASCII Code 39		✓	✓	✓	✓	✓	✓
Telepen		✓	✓	As Code 39	✓	✓	✓

APPENDIX B (CONTINUED)

Parameter	Default	OCIA	RS232	Light Pen	IBM 46XX	KBW	USB
Paraf Support ITF		✓	✓	✓	✓	✓	✓
ITF Symbol Lengths	Variable	✓	✓	✓	✓	✓	✓
Minimum Symbol Length	3	✓	✓	✓	✓	✓	✓
Symbol Length Lock	None	✓	✓	✓	✓	✓	✓
Bars High as Code 39	*			✓			
Spaces High as Code 39				✓			
Bars High as Scanned				✓			
Spaces High as Scanned				✓			
Low Speed Option				✓			
Toggle on Decode				✓			
10x Narrow Element	*			✓			
50x Narrow Element				✓			
Poll Light Pen Source				✓			
Beeper Tone	Normal	✓	✓	✓	✓	✓	✓
Beep/Transmit Sequence	Before transmit	✓	✓	✓	✓		✓
Communication Timeout	none	✓	✓	✓	✓	✓	
Razzberry tone on Timeout		✓	✓	✓	✓	✓	
Three beeps on Timeout		✓	✓	✓	✓	✓	
Same symbol rescan timeout 100 msec		✓	✓	✓	✓	✓	✓
Same symbol rescan timeout 200 msec		✓	✓	✓	✓	✓	✓
Same symbol rescan timeout 500 msec	*	✓	✓	✓	✓	✓	✓
Same symbol rescan timeout 1200 msec		✓	✓	✓	✓	✓	✓
Same symbol rescan timeout 2000 msec		✓	✓	✓	✓	✓	✓
No Same Symbol Timeout		✓	✓	✓	✓	✓	✓
Extra Same Symbol Check		✓	✓	✓	✓	✓	✓
Normal Same Symbol Check	*	✓	✓	✓	✓	✓	✓
Infinite Same Symbol Timeout		✓	✓	✓	✓	✓	✓
Number of scan buffers (maximum)	2	✓	✓	✓	✓	✓	✓

APPENDIX B (CONTINUED)

Parameter	Default	OCIA	RS232	Light Pen	IBM 46XX	KBW	USB
Inter-character delay Programmable in 1 msec steps (max 255 msecs)	1 msec 10 msec in KBW	✓	✓	✓	✓	✓	
Transmit UPC-A check digit	*	✓	✓	✓	✓	✓	✓
Transmit UPC-E check digit		✓	✓	✓	✓	✓	✓
Expand UPC-E		✓	✓	✓	✓	✓	✓
Convert UPC-A to EAN-13		✓	✓	✓	✓	✓	✓
Transmit lead zero on UPC-E		✓	✓	✓	✓	✓	✓
Transmit UPC-A number system	*	✓	✓	✓	✓		✓
Transmit UPC-A Manufacturer ID#	*	✓	✓	✓	✓		✓
Transmit UPC-A Item ID#	*	✓	✓	✓	✓		✓
Transmit Codabar Start/Stop Characters		✓	✓		✓		✓
CLSI Editing (Enable)		✓	✓		✓		✓
Transmit Mod 10/ITF		✓	✓		✓		✓
Transmit MSI-Plessey		✓	✓		✓		✓
Parity	Space		✓		✓		
Baud Rate	9600		✓				
8 Data Bits			✓			✓	
7 Data Bits	*		✓				
Stop Bits	2		✓			✓	
Manufacturer's ID			✓			✓	✓
Scanner ID			✓			✓	✓
Transmit Sanyo ID Characters			✓			✓	✓
Nixdorf ID			✓			✓	✓
Aim ID			✓			✓	✓
Sineko ID			✓			✓	✓
Sni Beetle ID			✓			✓	✓
Tec ID			✓			✓	✓
NCR ID			✓			✓	✓
Rochford Thomson ID			✓			✓	✓
Family Dollar ID			✓			✓	✓
LRC Enabled			✓			✓	✓
UPC Prefix			✓			✓	✓
UPC Suffix			✓			✓	✓

APPENDIX B (CONTINUED)

Parameter	Default	OCIA	RS232	Light Pen	IBM 46XX	KBW	USB
Carriage Return	*		✓			✓	✓
Line Feed-Disabled by default in KBW	*		✓				✓
Tab Prefix			✓				✓
Tab Suffix			✓				✓
"C" prefix			✓				✓
"I" prefix			✓				✓
STX prefix			✓				✓
ETX suffix			✓			✓	✓
"DE" Disable Command			✓				
"FL" Laser Commands			✓				
DTR Handshaking support			✓				
RTS/CTS Handshaking			✓				
Character RTS/CTS	*		✓				
Message RTS/CTS			✓				
XON/XOFF Handshaking			✓				
ACK/NAK			✓				
Two Digit Supplements		✓	✓	As Code 39	✓	✓	✓
Five Digit Supplements		✓	✓	As Code 39	✓	✓	✓
Bookland (978)		✓	✓	As Code 39	✓	✓	✓
977 (2 digit) Supplemental Requirement		✓	✓	✓	✓	✓	✓
Supplements are not Required	*	✓	✓	✓	✓	✓	✓

APPENDIX B (CONTINUED)

Parameter	Default	OCIA	RS232	Light Pen	IBM 46XX	KBW	USB
Coupon Code 128		✓	✓	As Code 39	✓	✓	✓
Programmable Code Lengths	7 avail	✓	✓	✓	✓	✓	✓
Programmable Suffix Characters	10 avail		✓			✓	✓
Prefixes for Individual Code types			✓			✓	✓
Inter Scan-Code Delay Programmable (100 μ sec steps)	800 μ sec					✓	
Function/Control Key Support						✓	✓
Minimum Element Width Programmable in 5.6 μ sec steps	1 msec.			✓			
Country Coded Keyboards	US					✓	✓

Scanner Pinout Connections


MS5145-41 (RS-232C & LTPN)	
Pin	Function
1	Ground
2	RS-232 Transmit Output
3	RS-232 Receive Input

MS5145-37 (USB/KBW)	
Pin	Function
1	Ground
2	D-
3	D+
4	PC DATA
5	PC CLOCK
6	KB CLOCK
7	PC+5V/V_USB
8	KB DATA
9	V_EXT
10	Shield Ground

Cable Connector Configurations

- **RS232 PowerLink Cable** with built in power jack [MLPN 55-55000A]


The RS232 PowerLink cable is terminated with a 9-pin D-Type connector to the host.

<div> <p>"Standard" PowerLink cable</p>  </div>	
Pin	Function
1	Shield Ground
2	RS-232 Transmit Output
3	RS-232 Receive Input
4	DTR Input/Light Pen Source
5	Power/Signal Ground
6	Light Pen Data
7	CTS Input
8	RTS Output
9	+5VDC*


APPENDIX C (CONTINUED)

• Keyboard Wedge PowerLink and Adapter Cable [MLPN 55-55002A]


The Keyboard Wedge PowerLink cable is a “Y” cable terminated with a 5-pin DIN female connector on one end, and a 6-pin mini DIN male on the other.



**Keyboard Wedge
PowerLink Cable**




5-Pin DIN, Female



6-Pin DIN, Male


Metrologic will supply an adapter cable with a 5-pin DIN male connector on one end and a 6-pin mini DIN female connector on the other.

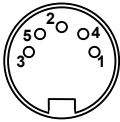

5-Pin Din, Male



Adapter Cable



6-pin Mini Din, Female

According to the termination required, connect the appropriate end of the adapter cable to the PowerLink cable, leaving the necessary termination exposed for connecting to the keyboard and the keyboard port on the PC.

The pin assignments of the Keyboard Wedge PowerLink and adapter cable are as follows:

POWERLINK CABLE


5-pin Female DIN	
Pin	Function
1	Keyboard Clock
2	Keyboard Data
3	No Connect
4	Power Ground
5	+5 Volts DC
6-pin Male Mini-DIN	
Pin	Function
1	PC Data
2	No Connect
3	Power Ground
4	+5 Volts DC
5	PC Clock
6	No Connect

ADAPTER CABLE


5-pin Male DIN	
Pin	Function
1	PC Clock
2	PC Data
3	No Connect
4	Power Ground
5	+5 Volts DC
6-pin Female Mini-DIN	
Pin	Function
1	Keyboard Data
2	No Connect
3	Power Ground
4	+5 Volts DC
5	Keyboard Clock
6	No Connect

- **USB PowerLink cable** [MLPN 55-55165A]

The USB PowerLink cable is terminated with an USB A type connector.

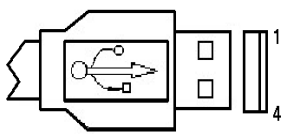

USB A Type Connector

USB PowerLink cable	
	
Pin	Function
1	PC+5V/V_USB
2	D-
3	D+
4	Ground

APPENDIX D

Warranty and Disclaimer

Limited Warranty

The MS5145 scanner is manufactured by Metrologic at its Suzhou, China facility. The MS5145 scanners have a two (2) year limited warranty from the date of manufacture. Metrologic warrants and represents that all MS5100 scanners are free of all defects in material, workmanship and design, and have been produced and labeled in compliance with all applicable U.S. Federal, state and local laws, regulations and ordinances pertaining to their production and labeling.

This warranty is limited to repair, replacement of Product or refund of Product price at the sole discretion of Metrologic. Faulty equipment must be returned to Metrologic. To do this, contact Metrologic's Customer Service/Repair Department to obtain a Returned Material Authorization (RMA) number.

In the event that it is determined the equipment failure is covered under this warranty, Metrologic shall, at its sole option, repair the Product or replace the Product with a functionally equivalent unit and return such repaired or replaced Product without charge for service or return freight, whether distributor, dealer/reseller, or retail consumer, or refund an amount equal to the original purchase price.

This limited warranty does not extend to any Product which, in the sole judgement of Metrologic, has been subjected to abuse, misuse, neglect, improper installation, or accident, nor any damage due to use or misuse produced from integration of the Product into any mechanical, electrical or computer system. The warranty is void if the case of Product is opened by anyone other than Metrologic's repair department or authorized repair centers.

THIS LIMITED WARRANTY, EXCEPT AS TO TITLE, IS IN LIEU OF ALL OTHER WARRANTIES OR GUARANTEES, EITHER EXPRESS OR IMPLIED, AND SPECIFICALLY EXCLUDES, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE UNDER THE UNIFORM COMMERCIAL CODE, OR ARISING OUT OF CUSTOM OR CONDUCT. THE RIGHTS AND REMEDIES PROVIDED HEREIN ARE EXCLUSIVE AND IN LIEU OF ANY OTHER RIGHTS OR REMEDIES. IN NO EVENT SHALL METROLOGIC BE LIABLE FOR ANY INDIRECT OR CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES TO PERSON OR PROPERTY, OR EFFECT ON BUSINESS OR PROPERTY, OR OTHER DAMAGES OR EXPENSES DUE DIRECTLY OR INDIRECTLY TO THE PRODUCT, EXCEPT AS STATED IN THIS WARRANTY. IN NO EVENT SHALL ANY LIABILITY OF METROLOGIC EXCEED THE ACTUAL AMOUNT PAID TO METROLOGIC FOR THE PRODUCT. METROLOGIC RESERVES THE RIGHT TO MAKE ANY CHANGES TO THE PRODUCT DESCRIBED HEREIN.

North America Headquarters

Metrologic Instruments, Inc.
90 Coles Road
Blackwood, NJ 08012-4683

Customer Service: 1-800-ID-METRO
Tel: 856-228-8100
Fax: 856-228-6673
Email: info@metrologic.com
Website: www.metrologic.com

China Facility

Metro (Suzhou) Technologies Co., Ltd
221 Xing Hai Street
Suzhou Industrial Park
Suzhou, China 215021

Tel: 86-512-2572511
Fax: 86-512-2571517
Email: info@cn.metrologic.com

APPENDIX E

Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice

This Class B digital apparatus complies with Canadian ICES-003.

Caution

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser light exposure. Under no circumstances should the customer attempt to service the laser scanner. Never attempt to look at the laser beam, even if the scanner appears to be nonfunctional. Never open the scanner in an attempt to look into the device. Doing so could result in hazardous laser light exposure. The use of optical instruments with the laser equipment will increase eye hazard.

Remarque

Cet appareil numérique de la class B est conforme à la norme NMB-003 du Canada.

Attention

L'emploi de commandes, réglages ou procédés autres que ceux décrits ici peut entraîner de graves irradiations. Le client ne doit en aucun cas essayer d'entretenir lui-même le scanner ou le laser. Ne regardez jamais directement le rayon laser, même si vous croyez que le scanner est inactif. N'ouvrez jamais le scanner pour regarder dans l'appareil. Ce faisant, vous vous exposez à une rayonnement laser mortel. L'emploi d'appareils optiques avec cet équipement laser augmente le risque d'endommagement de la vision.

Achtung

Die Verwendung anderer als der hier beschriebenen Steuerungen, Einstellungen oder Verfahren kann eine lebensgefährliche Laserstrahlung hervorrufen. Der Kunde sollte unter keinen Umständen versuchen, den Laser-Scanner selbst zu warten. Sehen Sie niemals in den Laserstrahl, selbst wenn Sie glauben, daß der Scanner nicht aktiv ist. Öffnen Sie niemals den Scanner, um in das Gerät hineinzusehen. Wenn Sie dies tun, können Sie sich einer lebensgefährlichen Laserstrahlung aussetzen. Der Einsatz optischer Geräte mit dieser Laserausrüstung erhöht das Risiko einer Sehschädigung.

Attenzione

L'utilizzo di sistemi di controllo, di regolazioni o di procedimenti diversi da quelli descritti nel presente Manuale può provocare dei raggi laser pericolosi per la vita. Il cliente non deve assolutamente tentare di riparare egli stesso lo scanner laser. Non guardate mai nel raggio laser, anche se credete che lo scanner non sia attivo. Non aprite mai lo scanner per guardare dentro l'apparecchio. Se tuttavia lo fate, potete esporvi a dei raggi laser pericolosi per la vita. L'uso di apparecchi ottici con questo equipaggiamento laser aumenta il rischio di danni alla vista.

Patent Information

"This METROLOGIC product may be covered by one or more of the following U.S. Patents:

U.S. Patent No.;

5,260,553; 5,340,971; 5,424,525; 5,484,992; 5,525,789; 5,528,024;
5,616,908; 5,627,359; 5,661,292; 5,777,315; 5,789,730; 5,789,731;
5,811,780; 5,828,048; 5,925,870; 6,029,894; 6,209,789; 6,227,450;
6,283,375;

No license right or sublicense is granted, either expressly or by implication, estoppel, or otherwise, under any METROLOGIC or third party intellectual property rights (whether or not such third party rights are licensed to METROLOGIC), including any third party patent listed above, except for an implied license only for the normal intended use of the specific equipment, circuits, and devices represented by or contained in the METROLOGIC products that are physically transferred to the user, and only to the extent of METROLOGIC'S license rights and subject to any conditions, covenants and restrictions therein."

Other worldwide patents pending.

A

AC input/outlet 2, 3, 4, 6
 Accessories 2
 Approvals 13, 20, 30
 Assignments
 pin 2, 4, 6, 7, 26, 27
 Audible 9, 11, 19
 Autodiscriminates 19

B

Bar code ... 1, 3, 8-10, 15, 16, 18, 19
 Bar width 12
 Beep 3, 4, 6, 8-11, 14-16, 19, 22

C

Cable 1-4, 6-8, 14, 17, 19, 26, 27
 communication. 17, 18, 21, 26, 27
 detachable 1, 2, 7, 27
 pin assignments 26, 27
 powerlink 1-4, 6-8, 26, 27
 Caution 4, 6, 13, 30
 CDRH 20
 CodeGate® 1, 3, 8
 Communication 4, 9, 10, 17-22
 Compliance 4, 6, 28, 30
 Configuration . 1, 2, 9, 11, 14, 18, 26
 Current 6, 14, 20
 Customer service 2, 28

D

DC transformer 20
 Decode capability 19
 Default settings 3, 21
 Depth of field 1
 Design specifications 19
 Disclaimer 28

E

Electrical power supply ... 3-7, 14, 26

F

Failure indicator(s) 9, 11, 14
 Failure modes 11

G

Green LED 3, 4, 8, 10, 19

H

Host 3, 4, 6, 7, 10, 14, 17, 26

I

Indicators 8, 9, 10, 19
 Input voltage 4, 6, 20
 Installation 2, 4, 6, 28
 Interfaces 1, 19, 26

K

Keyboard wedge . 1, 2, 6, 19, 26, 27

L

Labels 13
 Light levels 20
 Light pen 1, 19, 21, 22, 26
 Light source 19

M

Maintenance 13

N

Notices 30

O

Operating current 20
 Operating temperture 20
 Output window 8, 12, 13

P

Parts2, 8
 Power supply3, 4, 6, 7, 26
 Programming modes3, 17, 18

Q

Quick start3

R

Razzberry tone9, 10, 11, 22
 Red LED3, 4, 6, 8, 9, 10
 Repair11, 28
 RMA28
 RS-2321, 17, 18, 19, 21, 26

S

Scan lines19
 Scan speed19
 SELV4, 6
 Service11, 28

Specifications19

T

Tones9, 19
 Transformers20
 Troubleshooting14, 15, 16, 17

U

USB1,28,30

V

Ventilation20
 Visual10
 Voltage20

W

Warranty28
 Weight19
 Window3, 8, 13

June 2002



70 - 79001B